


# Before You Start

Grab a smooth  
fast piano track

## Names of Things and What They Do

### Top Panel

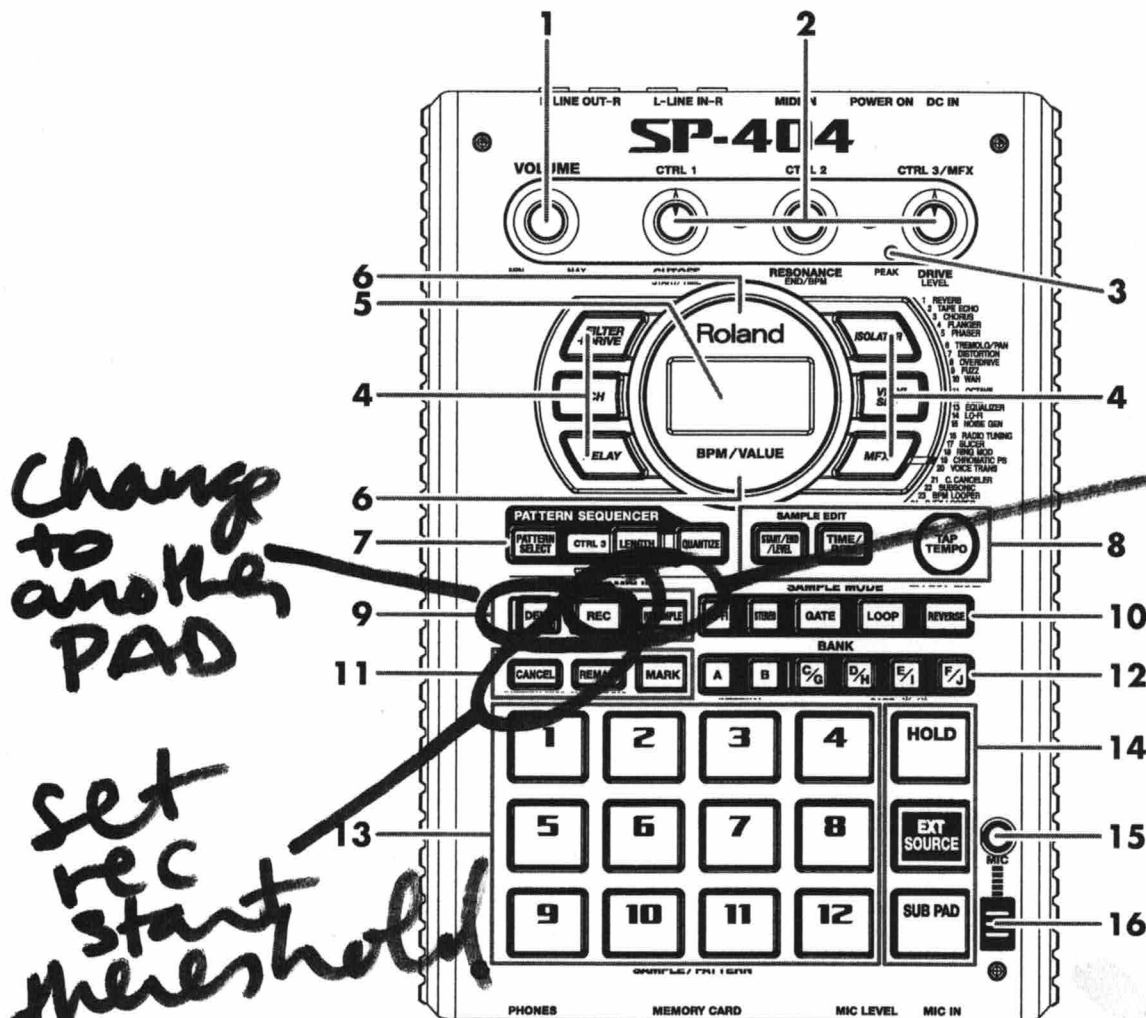

#### 1. VOLUME Knob

This knob adjusts the volume of the line output and the headphones.

#### 2. CTRL 1-3 Knobs

These knobs control the parameters that are assigned to each knob according to the effect you've selected. The knobs are also used in the following ways:

##### CTRL 1 Knob

You can use this knob to adjust the sample start location or the sample playback time.

##### CTRL 2 Knob

You can use this knob to adjust the pattern's BPM (tempo) or the sample end location.

##### CTRL 3/MFX Knob

You can use this knob to select an MFX type, or to adjust the sampling level or the sample volume.

#### 3. PEAK Indicator

This indicator helps you adjust the level when sampling. In order to sample at the correct level, adjust the level so that this indicator lights occasionally.

#### 4. Effect Buttons

Use these buttons to select the effect you want to use. An effect is on when its button is lit, and off when the button is dark. (p. 12, p. 18, p. 26, p. 45)

\* You can't turn two or more effects on simultaneously.

#### 5. Display

This provides information such as the BPM (tempo) of the sample or pattern, the values of various settings, and error messages. The display can also show the remaining available sampling time.

#### 6. Display Illumination

This will blink in synchronization with the tempo of the pattern.